


OPERATING INSTRUCTIONS

1. Refer to your vehicle owner's manual for proper jacking procedural lift only on areas of the vehicle as specified by vehicle manufacturer.
2. Position stands under vehicle at points specified by vehicle manufacturer as proper load support points.
3. To adjust stands: hold control lever up while lifting saddle shaft to desired height. Push control lever down to lock pawl into teeth located in center column. **MAKE SURE PAWL IS FULLY ENGAGED INTO TEETH.**
4. Carefully lower load onto stands.

OPERATOR'S MANUAL

3/6/12 TON

RACHET AXLE STANDS

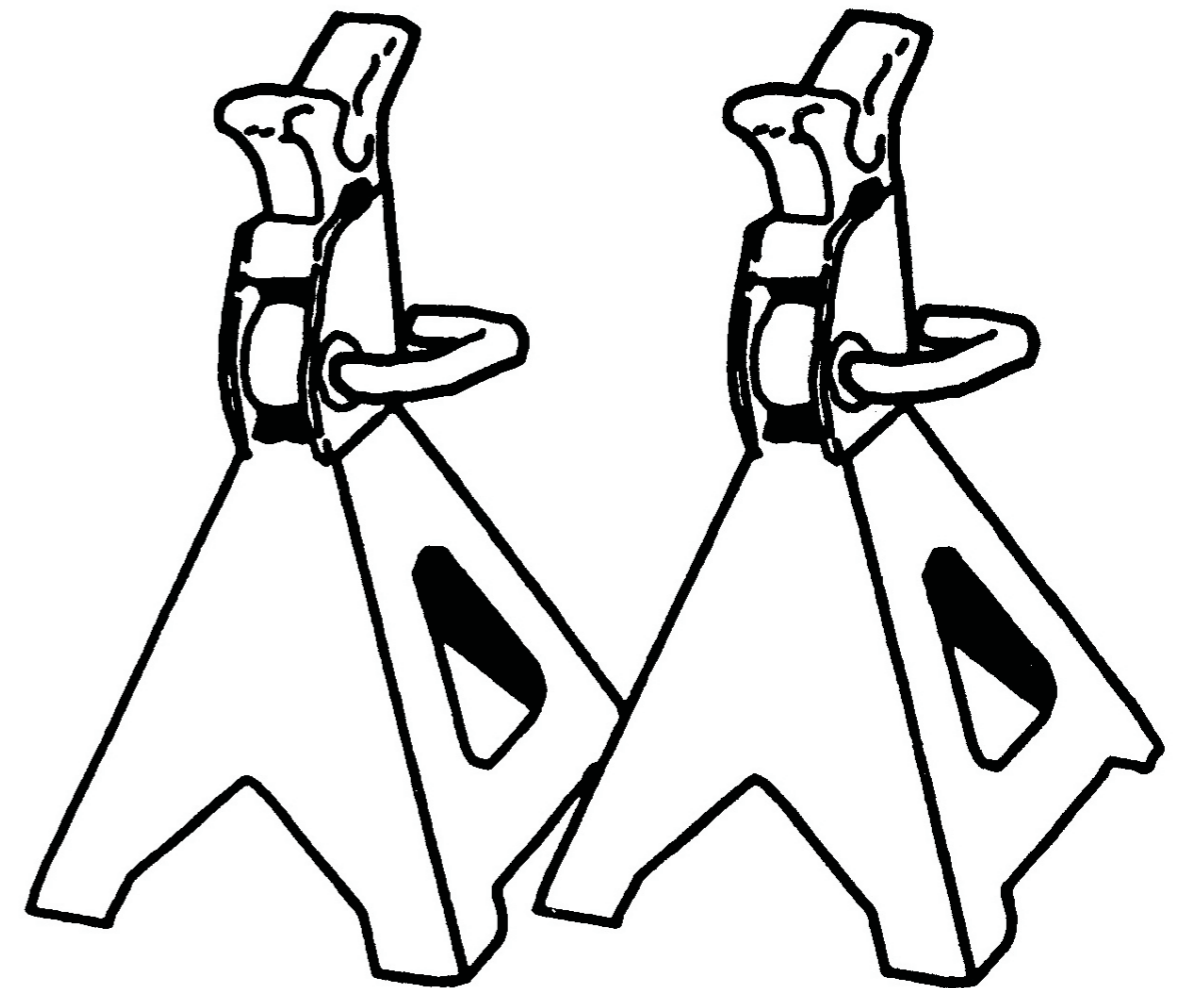

⚠ Read this manual and follow all the safety rules and operating instructions before using this product.

SPECIFICATIONS

Lifting Capacity (Ton)	Max. Height (mm)	Min. Height (mm)	Gross Weight (kg)	Net Weight (kg)	Package Size (mm)
3	450	305	7.5	6.6	340*255*330
6	620	400	16.5	14.6	455*340*425
12	760	500	27	26.5	300*330*580

WARNING!!

1. Read, understand and follow all instructions before operating this device.
2. Do not exceed rated capacity.
3. Use only on hard, level surfaces.
4. Center load on saddle.
5. Use as a matched pair to support one end of a vehicle only.
One pair per vehicle only.
6. Jack stands are not to be used to simultaneously support both ends or one side of a vehicle.
7. No alterations shall be made to this device.
8. Failure to heed these warnings may result in personal injury or property damage.

MAINTENANCE & INSPECTION

1. Visual inspect shall be made before use of the stands, checking cracks, cracked welds and missing and/or damage parts. And stand that appears to be damaged in any way shall be removed from service immediately.
2. BECAUSE OF THE POTENTIAL HAZARDS ASSOCIATE THE MISUSE OF EQUIPMENT OF THIS TYPE, NO REPLACEMENTS SHALL BE MADE TO THE PRODUCT.

